

Screw Terminal Ultra-Slim Signal Conditioners M6N Series


specification sheets.)

Isolation: Power to ground

INSTALLATION BASE

Functions & Features

- Backplane to collectively supply power to the M6N modules in combination with the Power Supply Module (model: M6NPSx or M6-PSM)
- UL approval

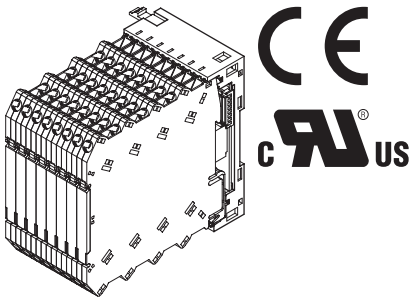

MODEL: M6NBS-[1][2]

ORDERING INFORMATION

- Code number: M6NBS-[1][2]
- Specify a code from below for [1] and [2].
(e.g. M6NBS-08/UL)

[1] NUMBER OF SLOTS

08: 8 slots

08P: 8 slots (for extension)

08A: 8 slots + power supply slot (for model M6-PSM)
(UL not available)

[2] OPTIONS

STANDARDS & APPROVALS

blank: CE marking

/UL: UL approval (CE marking)

RELATED PRODUCTS

- M6N series signal conditioners (Not able to supply to AC power signal conditioners (M2 code))
- Power supply module (model: M6NPS1)
- Power supply module (model: M6NPS2)
- Power supply module (model: M6-PSM)
- Blank filler module (model: M6NDM)

GENERAL SPECIFICATIONS

Capacity: Up to 48 modules with Extension Bases (The usable number of signal conditioners depends on the capacity of the power supply module. Refer to the M6-PSM

INSTALLATION

Operating temperature: -20 to +55°C (-4 to +131°F)

Operating humidity: 30 to 90 %RH (non-condensing)

Atmosphere: No corrosive gas or heavy dust

Mounting: Surface or DIN rail

Weight:

M6NBS-08, -08P: 50 g (1.8 oz) without signal conditioners

M6NBS-08A: 80 g (2.8 oz) without signal conditioners

PERFORMANCE

Insulation resistance: $\geq 100 \text{ M}\Omega$ with 500 V DC

Dielectric strength: 2000 V AC @1 minute (power to ground)

STANDARDS & APPROVALS

CE conformity:

EMC Directive (2004/108/EC)

EN 61000-6-4 (EMI)

EN 61000-6-2 (EMS)

Approval:

UL/C-UL nonincendive Class I, Division 2,
Groups A, B, C, and D hazardous locations
(ANSI/ISA-12.12.01, CAN/CSA-C22.2 No.213)

UL/C-UL general safety requirements
(UL 61010-1, CAN/CSA-C22.2 No.61010-1)


EXTERNAL VIEW

Install signal conditioners from the slot at either end.


Power Supply Modules (M6NPS1 or M6NPS2) could be mounted at any slots, however, installing them at either end is generally recommended.

Mount the power supply module (M6-PSM) on the power supply slot of M6NBS-08A.

■ M6NBS-08, M6NBS-08P

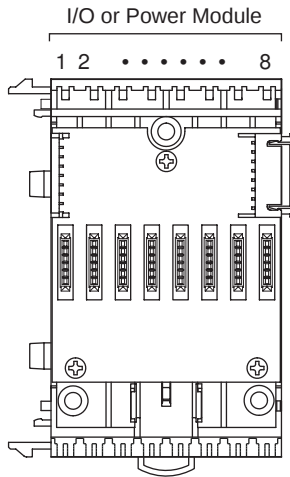



■ M6NBS-08A

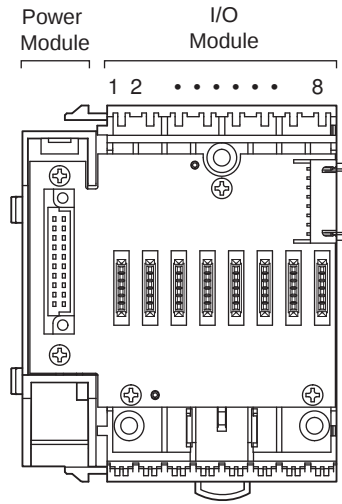



MODEL: M6NBS

DIMENSIONS unit: mm (inch)

■ M6NBS-08, M6NBS-08P

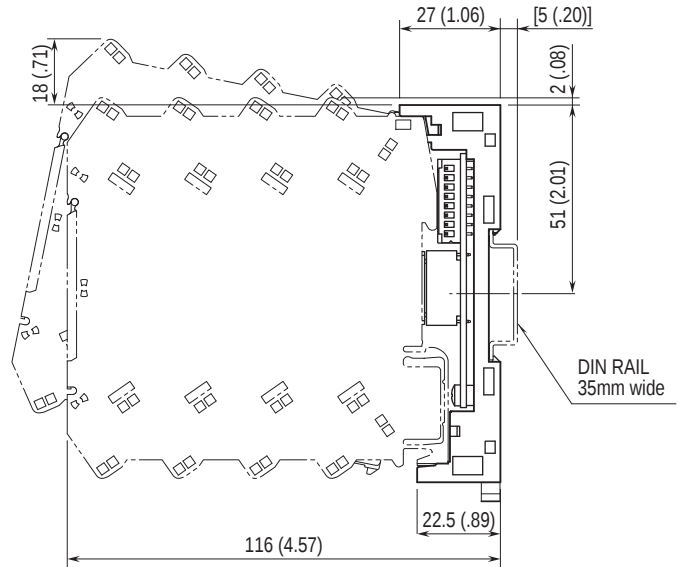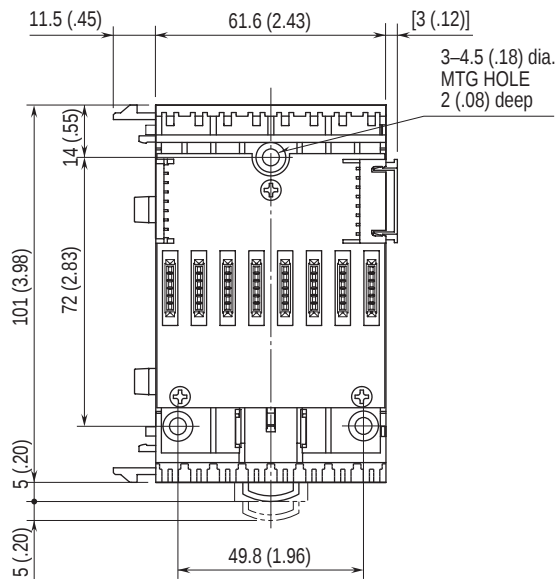

■ M6NBS-08A

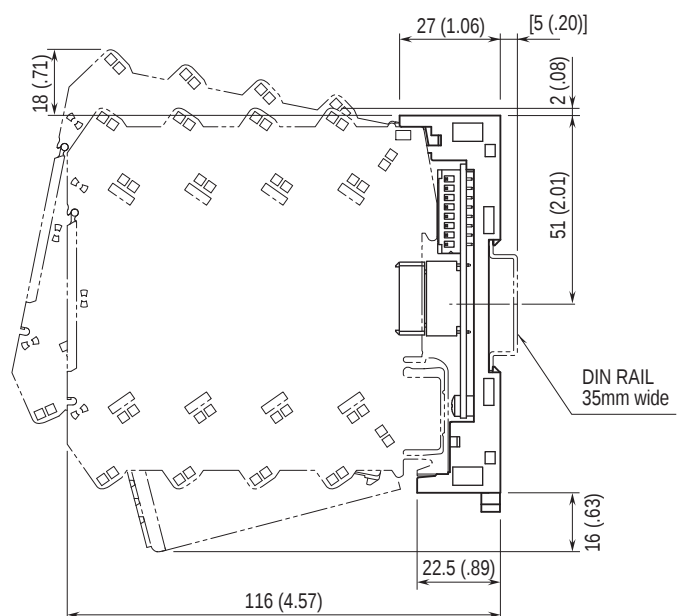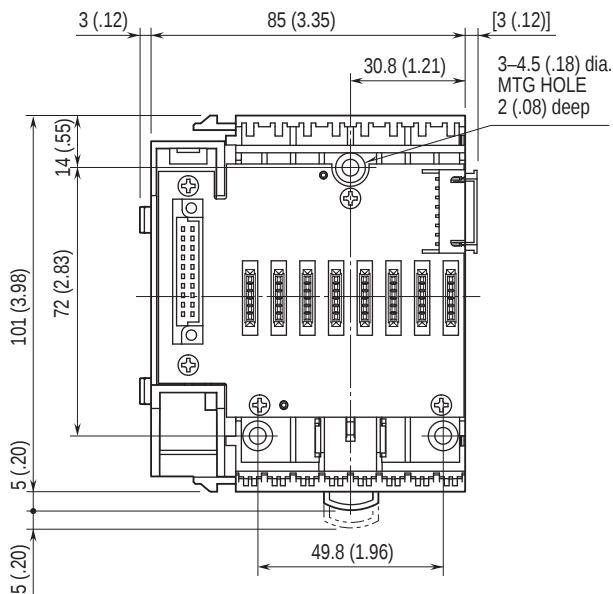

幸託有限公司
XIN TOP CORPORATION

TEL : (02)2598-1199

E-mail : info@xintop.com

FAX : (02)2596-2331


Website : www.xintop.com

MOUNTING REQUIREMENTS unit: mm (inch)

■ MOUNTING DIRECTION

The unit must be mounted on a vertical panel. Mounting in any other angle will cause internal temperature to rise, may shorten the product's life expectation or deteriorate its performance.


Panel ceiling or wiring conduit (height ≤50 mm or 2 in.)

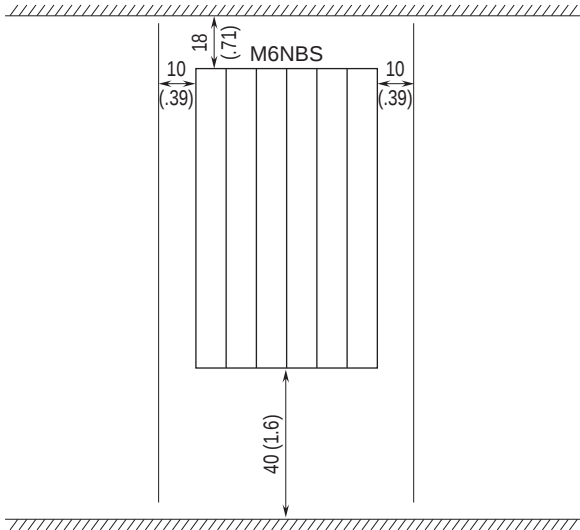


Panel bottom or wiring conduit (height ≤50 mm or 2 in.)

■ SURFACE MOUNTING


• M6NBS-08

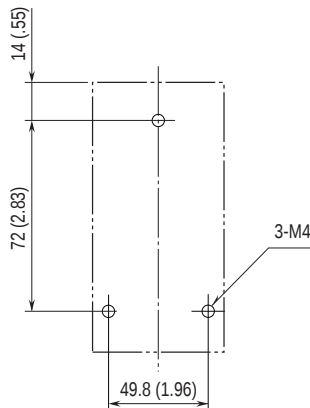


• M6NBS-08A

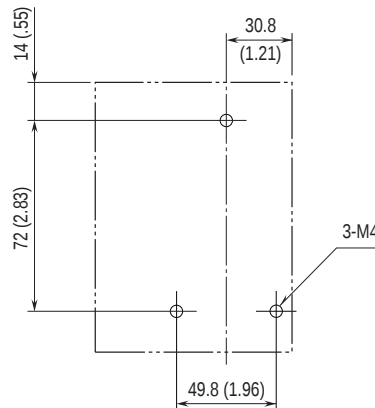

• M6NBS-08 + M6NBS-08P

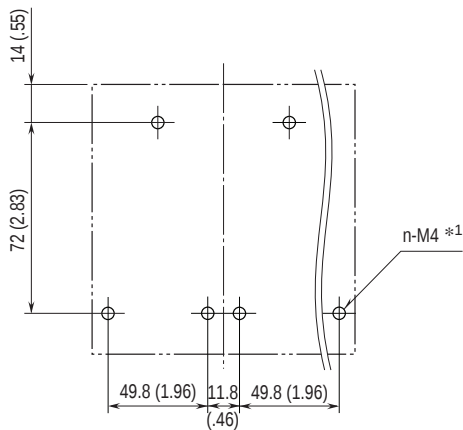

• M6NBS-08A + M6NBS-08P

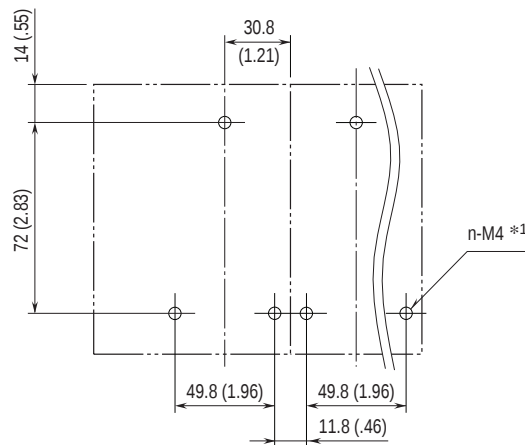

*1. n = (Number of bases) x 3



Specifications are subject to change without notice.



幸託有限公司
XIN TOP CORPORATION

TEL : (02)2598-1199
FAX : (02)2596-2331

E-mail : info@xintop.com
Website : www.xintop.com